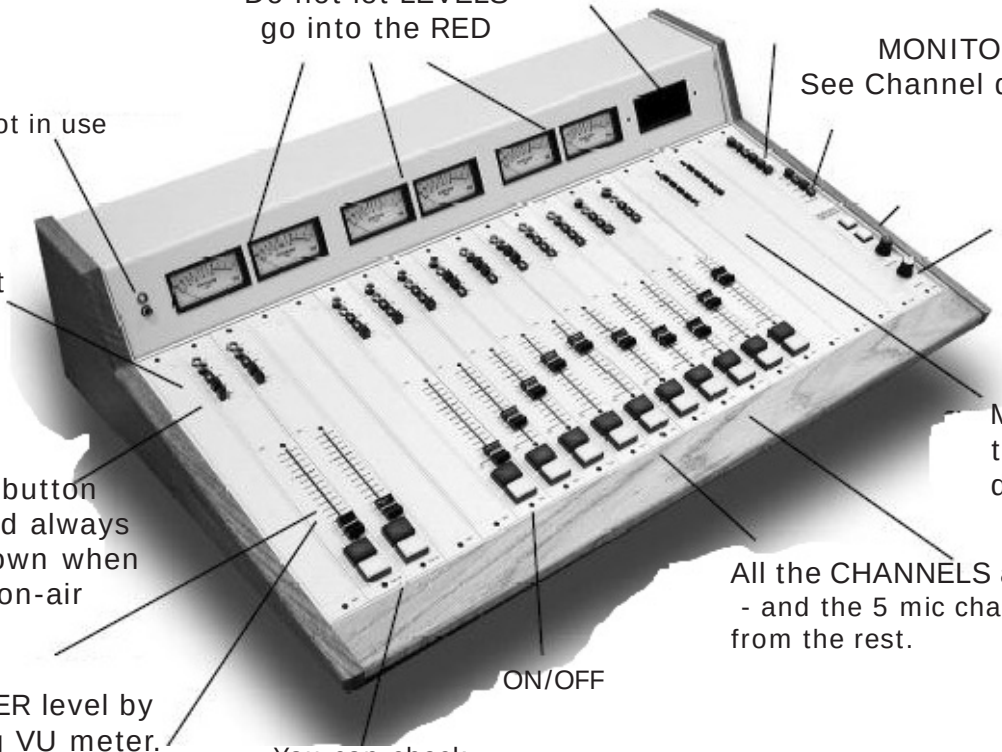
VU METERS:
Do not let LEVELS
go into the RED
TIMER
display
MONITORING:
See Channel descriptions
Not in use
Select 'A' on all
Channels except
far left
When mics are
on, SPEAKERS
are muted
MICS can be turned off and on
together. See Remotes
description
PGM button
should always
be down when
LIVE on-air
All the CHANNELS are labelled
- and the 5 mic channels are separated
from the rest.
ON/OFF
Set FADER level by
checking VU meter.
Move smoothly for best
sound
You can check
something in
CUE by pushing
the fader to the
bottom of the
channel.